COUPLER



General Description

Coupler Connects the rotating pump shaft to the motor drive shaft ensuring efficient power and torque transmission.



Survey no-109, Shree Laxmi Residency, A-401, Raikar mala, near Maruthi mandir, Dhayari, Pune-411 041, Maharashtra.